

OPERATING THE HEATER

To use the heater, turn on the power main and preset the power selection.
Use the outlet mixer tap to optimise the cold and hot water ratio to achieve desire water temperature.

COMPONENT LAYOUT

MODEL: S630M

- 1) Terminal Block
- 2) Auto-reset Thermostat
- 3) Manual Reset Capillary Thermal Cut-out
- 3a) Capillary Thermal Cut-out reset button
- 4) Temperature Probe Sensor
- 4) Tank Assembly
- 5) PCB Light Indicator For S630M
- 6) Cable Clip
- 7) Flow Sensor Device (PDFS)
- 8) Micro Switch
- 9) Pressure Relief Valve (PRV) to be installed at inlet

MOUNTING HOLES AND CABLE ENTRY POINT FOR CLASSIC SERIES

- a) Cover Fixing Holes X 3
- b) Wall Mounting Holes X 2
- c) Cable Entry

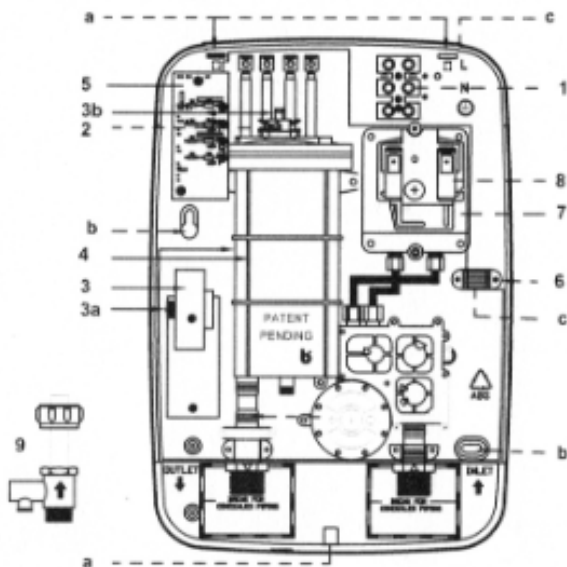


FIG. 5

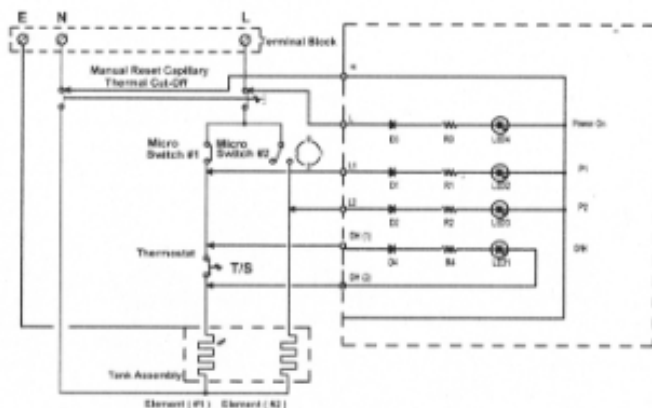


FIG. 6 Schematic Diagram of S630M



Sensation Series

Instantaneous Electric Multi-outlet Shower Heater - S630M



WARNING: i) This appliance is not to be used for a potable water supply
ii) The water inlet of this appliance shall not be connected to inlet water obtained from any other water heating system

Nominal Power Rating	4.2-5.0kW, 220-240V, 50-60Hz, AC
Minimum Inlet Water Pressure	100kPa
Maximum Inlet Water Pressure	750kPa
Water Connection	15mm (1/2" BSP)
Heating Element	Japan
Heater Casing	Splash Proof IP25, Flame Retardant ABS Plastic
Dimension	320mm x 220mm x 130mm
Weight	1.77kg

Installation & Operating Instructions

SITTING OF SHOWER HEATER

WARNING: THE SHOWER HEATER MUST NOT BE POSITIONED WHERE IT WILL BE SUBJECTED TO FREEZING CONDITIONS.

The heater can be mounted in various position shown in Fig. 1. Position it away from direct contact with water from the Hand Shower. Mixer tap can be used with this heater. If in doubt, please consult a qualified plumber or contact your Local Authorized Distributor.

1. Separate permanently connected supply from consumer unit
2. Shower set
3. Shower heater unit
4. Mixer Tap
5. Double poles heater switch
6. Isolating stopvalve

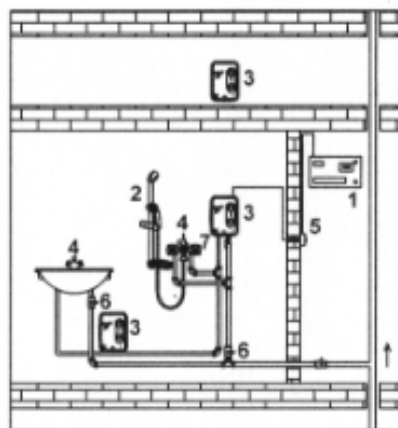


Fig. 1

NOTE: Installation must be carried out by a qualified electrician.

- i) The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- ii) Children should be supervised to ensure that they do not play with the appliance.
- iii) The maximum inlet water temperature shall not exceed 750kPa and the minimum inlet water pressure shall not be less than 100kPa for the correct operation of the appliance.
- iv) The water heater must be permanently connected to the electrical supply through a double pole switch having a contact separation of at least 3mm in all poles incorporated in the fixed wiring. **Do not use 3 pin plug or socket for this appliance.**

MOUNTING THE SHOWER HEATER TO THE WALL

NOTE: The control knob on the cover is integral part of the heater; do not try to remove it during mounting of heater.

1. Unscrew the top and bottom retaining screws and lift the cover up from the base plate.
2. Place the base plate on the desired mounting position, upon confirmation, mark out the position of the 2 mounting holes on the wall. (See Fig. 2)
3. Drill and insert the wall plug supplied into the holes. Mount the base plate with the wall screws provided without tightening the screws to leave some allowance for adjustment after plumbing has been adjusted. After that tighten both screws.

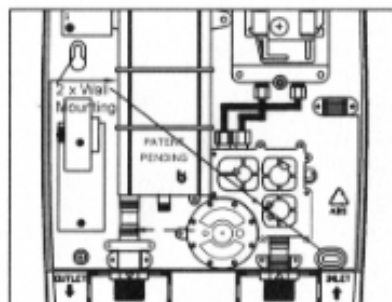


Fig. 2

PLUMBING CONNECTION

NOTE: Plumbing is to be done before wiring.

Do not use any jointing compounds on any pipe fittings for installation.

Do not use soldered fittings within the vicinity of the shower unit.

Compression fittings supplied must be used and not quick connect types. If a filter is to be used it is to be inserted in the inlet pipe of the Shower Heater. Cold water inlet is on the right and hot water outlet is on the left.

A Stopvalve (complying with the water by-laws) must also be fitted as an independent means of isolating the water supply should maintenance or servicing is required.

NOTE: If the premises is new, remember to flush out the incoming water piping of debris and particles before connecting to the heater.

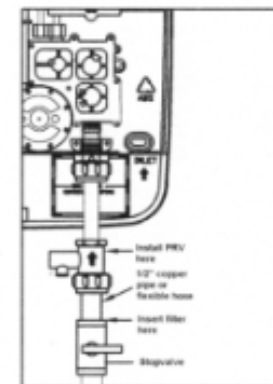


Fig. 3 PLUMBING CONNECTION

Note: Flushing Out
Once plumbing work is completed, flush out the tank by running water through the tank for 20 sec. this will remove any debris in the tank and piping. **DO NOT TURN ON POWER AT THIS STAGE.**

PRESSURE RELIEF VALVE

The auto-reset Pressure Relief Valve (PRV) at the inlet will help to release excess high pressure built up due to abnormal operation or excessive high in coming water pressure to prevent eruption of the tank body. Install at the inlet of the heater and discharge hose should direct to waste. (See Fig. 3)

ELECTRICAL CONNECTION

WARNING: THIS UNIT MUST BE EARTHED.

NOTE: A double pole linked switch with a minimum contact gap of 3mm in both the poles must be fitted in the circuit. The supply cable must conform to the regulations and must be sufficient for the amperage required. In doubt, please consult a qualified electrician or contact your local Authorised Distributor.

This is a 4.5kW heater. A minimum of 2.5mm² copper cable, 20A isolation switch & MCB is required.

Procedures

Ensure that the electricity is switched off. Use the cable entry points as shown. The cable can be surface clipped, hidden or via a conduit.

Route the cable into the Water Heater and connect it to the terminal block as shown in Fig. 4.

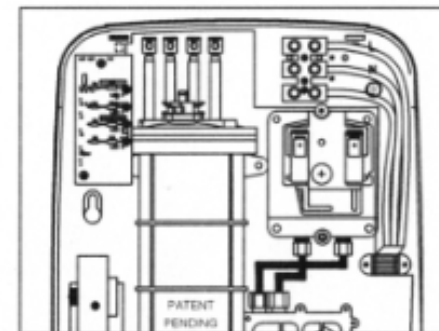


Fig. 4 ELECTRICAL CONNECTION

Live cable (red or brown) to terminal marked L
Neutral cable (blue or black) to terminal marked N
Earth cable (green & yellow) to terminal marked E